
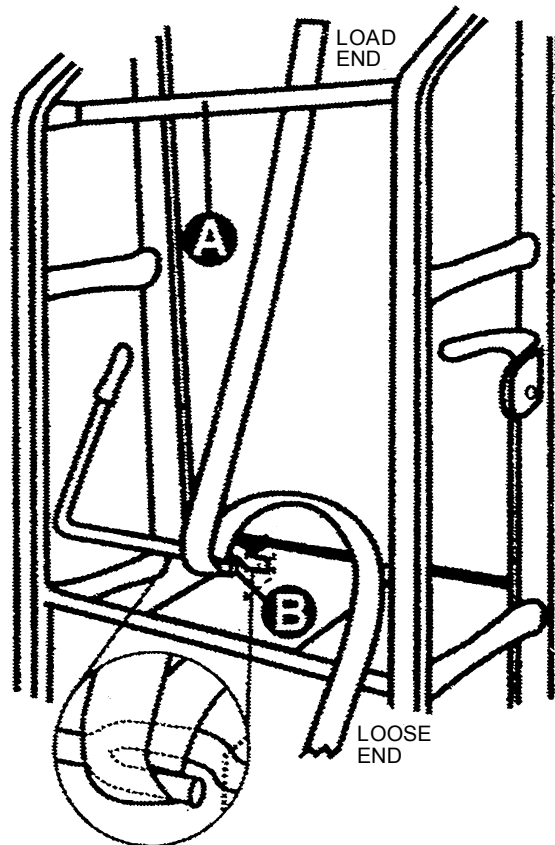


Dutro

COMPANY

OFFSET OPERATING INSTRUCTIONS

1. Stand behind hand truck.
2. Rotate handle (A) counter-clockwise.
3. Rotate strap (S) from its point of attachment (B), around the hook (C) and around the load.
4. From the load, run the strap around the hook (D) and around the hook (E) on the crank (Note that the end of the strap is toward the operator)
5. Pull out the slack; rotate the handle (A) clockwise to the left. Adjust the tension on the strap to allow the crank to turn and snap into locked position.

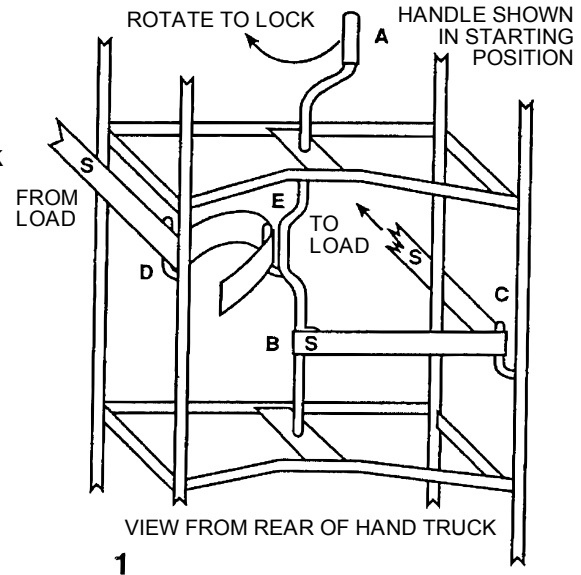

STRAP TOGETHER OPERATING INSTRUCTIONS

1. Stand behind truck with handle in up position.
2. Position strap in front of cross brace (A).
3. Thread strap over back of locking pin (B) and up through open slot.
4. Pull handle down to tighten.

Model 1888

Dutro

COMPANY